



Joystick

On the joystick, you will find:
- a power button (press to activate)
- a horn button
- a display showing battery capacity, time, speed, and driving profile
- two buttons labelled Mode and Profile
- a double button controlling the speed.

Press *Mode* to change between driving and adjustments of the seat and back. Tilt function can be controlled by moving the joystick up or down.

Move the joystick to the right or left to switch between tilt-in-space (0-45°) and tilt (96-131°).

Always use the tilt and recline functions carefully to avoid quick jerks.

There are 3 driving modes (manoeuvre, indoor, and outdoor) each with 5 speed levels. The maximum speed is 5 km/h, and the maximum range is 10 km.

The wheelchair charges when the corresponding charger is plugged into the back of the joystick and into power. The wheelchair cannot be operated while charging.

Charge to **100%** every day.

The wheelchair must immediately be connected for charging if the battery capacity shows 1-2 bars.

⚠ If the battery is completely discharged, it goes into "protection mode" for 3 days and cannot be used during that period.

Brakes

The brakes are integrated into the motor. That means, when the joystick is released, the wheelchair stops.

Daily maintenance

Clean the frame, seat and arm rests of the wheelchair using water and a regular cleaning agent.

The cushions can be removed and disinfected using ethanol 70-85% or a chlorine product of min. 1000 ppm and max. 10000 ppm.

The joystick is disinfected in the same way as the cushions.

(Last updated April 2024)



QUICK GUIDE

Kamille Power Comfort Wheelchair

Guide til transfer, electrical functions, and charging.

From bed to wheelchair active user

1. Swing footrests to the sides.
2. Adjust the seat angle to the needs of the user.
3. User sits down in the wheelchair.
4. Adjust the hip angle via the controller.
5. Swing back the footrests.

From bed to wheelchair - dependent user.

1. Swing footrests to the sides.
2. Adjust the seat angle to the needs of the user.
3. Adjust the hip angle via the controller.
4. Tilt the wheelchair backwards.
5. Swing back one arm rest.
6. Lift user sideways into the chair.
7. Swing back footrests and arm rest.

Adjusting the wheelchair

Make sure to assess the need of extra or less filling in the different cushions when user is placed in the wheelchair.

The angle of the push bar can be adjusted using the two thumb screws located on the right and left sides of the push bar.

The height of the push bar can be adjusted using the hand levers located on the back.

Armrests can be adjusted in height and angle using the thumbscrews on the sides.

Leg rests are adjustable in both height and position. They also have a swing away function.

The angle of the foot plate, the angle of the leg rest and the angle of the calf plate can be adjusted with tools.

Scan the code and get more information on Kamille Power Comfort Wheelchair.

